

A1 Omnicron 3000 Telephone Communicator

www.alarmhelp.net

Message selection

The communicator can supply upto 4 messages. You can make one common message and three alert messages.

Example

Message 1

This is an alarm message from John Smith

Message 2

Burglar alarm

Message 3

Fire Alarm

Message 4

Personal attack

The selection of the messages are as follows

Remove the front cover of the unit.

On the bottom right hand corner of the PCB there are 3 links.

For one message of 8 seconds leave all the links intact

For two messages of 4 seconds cut the top link

For four messages of 2 seconds cut the top and middle link

To double the time of all messages (with loss of sound quality) cut the bottom link.

Replace the front cover

Cover should not be removed when connected to a BT socket.

Entering the four telephone numbers to be dialed

Press the contact key

(Contact light will come on and dial tone will be heard)

Enter you first number

Press the memory key and number 1 to store the first number

Repeat for 2nd 3rd and last pressing memory 2,3 and 4 to store.

To test the telephone numbers

Press the contact check key followed by 1, 2, 3 or 4 for the telephone number you want.

To record messages

Message one is the common message

Press the record and message key to scroll through the messages

Select the message you want

Press and hold the two buttons whilst recording your message, release to stop the recording.

To play back the messages

Press the message button to hear the recorded message

Helpline

Call

07890 509131

Or Visit

www.alarmhelp.net