

DUAL CONTROL 4 ZONE SECURITY PANEL

KEYPAD -- KEYSWITCH

USER OPERATING INSTRUCTIONS

ARMING THE SYSTEM

1. Press RESET
2. Insert your User Code (4 digit).
3. Ensure all zone circuits are correctly armed. An illuminated zone LED would indicate an open door or similar problem.
4. If all zone indicator LEDs extinguish, press "ARM". An Exit tone will sound and will change in tempo to indicate that the unit will be armed in a further 10 seconds. Leave promptly by the approved route. The system will become active (armed) consistent with the time previously selected for Exit.

DISARMING THE SYSTEM

1. Enter through the approved route. An entry tone will sound and will change in tempo indicating there is 10 seconds left to disarm.
2. Press the RESET key on the control unit and enter the User Code. The system has now reverted to the day mode, which is confirmed by the illumination of the "DAY" LED.
3. If the alarm has been activated since your departure, the zone in which the intrusion occurred will be displayed. To return to "DAY" mode press "RESET".

NIGHT TIME SECURITY ARMING THE SYSTEM WHEN ON THE PREMISES

1. Insert user code ("DAY" LED will be extinguished). Any active zone will flash and an alternating tone will be heard.
2. To omit zones not required press "ZONE OMIT" followed by the number of the zone or zones. The selected zones will be illuminated.
3. Press "ARM" and the exit tone will be heard. At this point the "QUICK SET" may be pressed to reduce the exit delay time to 5 seconds, provided no sensing devices have to be passed.

DISARMING THE SYSTEM WHEN IN PREMISES

1. Make way by planned route to control panel.
 2. Press "RESET" and enter user code. The system should now be in Day mode which will be signified by the illumination of the "DAY" LED.
- N.B. If a full alarm condition exists the system can be silenced only by the entry of "RESET" followed by the correct user code. Also the system will activate to the full alarm condition after 4 incorrect near codes have been entered.

HISTORICAL INFORMATION

If an alarm condition has occurred, upon entering the 4 digit code the 1st activated zone will be displayed. Press "EVENT REPLAY" and the next zone activated will be shown with each press of the "EVENT REPLAY" key.

If RESET has been pressed it will be necessary to create another alarm condition then enter 4 digit user code.

KEYSWITCH UNIT

To arm with remote keyswitches turn to ON and then back to OFF immediately, and remove key.

To disarm with keyswitch the same procedure as above.

KEYSWITCH

Keyswitch arming and disarming can be used in conjunction with the keypad, when used it will provide the features already programmed.

Alternatively, the Keyswitch can be programmed as a Quick Set, mimicking the "QUICK SET" button on the keypad.

PROGRAMMING THE USER FUNCTIONS

1. Press "PROGRAMME FUNCTION" all LEDs should illuminate. Insert user code (1234). The "DAY" LED should now flash, indicating the unit is in user programming mode.

USER SECURITY CODE

Repeat 1, if "DAY" LED is not flashing.

To maintain security, the user should choose his / her own user code, as follows:-

Press 1 on the keypad. The LEDs of zone 1, 2, 3, and 4, will now be illuminated. Enter the 4 digit number you have selected. As the final number is entered all LEDs will be extinguished and two acceptance beeps will be heard. The "DAY" LED will be flashing, indicating that the new number has been accepted.

If further user programming is not required press RESET.

CHIME FACILITY ON ZONES

Repeat 1, if "DAY" LED is not flashing.

Any zone may be selected or removed as a "CHIME" Zone, as follows:-

Press 2 on the keypad, then enter the appropriate Zone number. Press "PROGRAMME FUNCTION" once to store the required Zones, and the "DAY" LED should now be flashing. Two beeps will be heard. To remove the Zone

(or Zones) if "DAY" LED is flashing, press 2 on the keypad and the Zone to be removed will be lit. Press that Zone number and the LED will be extinguished. Press "PROGRAMME FUNCTION" to store the information and the "DAY" LED will now be flashing.

If further user programming is not required press RESET and the "DAY" LED will be on continuously.

ALARM TEST FUNCTION

Repeat 1, if "DAY" LED is not flashing.

Press 3, "DAY" LED will stop flashing.
Press 1, siren will be activated, Press 1 to deactivate.
Press 2, strobe will be activated, Press 2 to deactivate.

Press RESET the "DAY" LED should be flashing.

If further user programming is not required press RESET the "DAY" LED should be on.

ZONE OMIT FACILITY ON KEYSWITCH

It is possible to operate the full zone omit facility on operation of the keyswitch by carrying out a pre-selection using the keypad.

Select zone omit in the normal manner, then arm.
Disarm by keypad or switch. Operation of the keyswitch will omit the pre-selected zones.

To remove this facility, disarm by keyswitch or keypad, and:

Press RESET and enter user code (to extinguish "DAY" mode LED).
Press RESET again. "DAY" LED will light and unit has returned to normal.